



Connect all "GND" together...  
Interconnectez tous les GND...  
Subject to minor modifications.  
See GXL88 manual for full info's.

BASIC INSTALLATION EXAMPLE for 12V SYSTEM (Pw=Code)	TYPE: GXL88 SMS INTERNET PC PMC
<ul style="list-style-type: none"> <li>* Optional internal DC to DC converter. Installed on request only. No need to connect V2(33) if (11) (12) connected.</li> <li>* Optional internal internet module. Normally installed on request. Can be left out when the internet is not to be used.</li> <li>* Optional external Power Meter Controller. To read it, send command [Pw SE] and [Pw SX] to the GXL88 controller.</li> </ul>	REV:1 DB NL 2015 155 x 90 x 60 mm See: <a href="http://gxl88-manual.html">gxl88-manual.html</a> Voir: <a href="http://gxl88-manuel.html">gxl88-manuel.html</a>